



© Copyright Ford 2010

Printed Copies are uncontrolled

Expert Fitment Required

Montage durch Fachwerkstatt erforderlich

Montaje sólo por el concesionario

Montage par spécialiste nécessaire

E' necessario in officina specializzata

Especialista em montagem requerido

Montage door vakman nodig

Montage ved professionelt værksted påkrævet

Nødvendig med montering fra fagvejværksted

Værkstedsmontage erfordras

Aseennus tarpeen merkittöjärjestyksä

Montáž ve specializované dílně nutná

A szereléshez szakműhely kell

Konieczny montaż przez warsztat specjalistyczny

Na towarówi amó ouvepyelo

Uzman servis kumulusu tarandian monte

edilmesi gerekmedir

Монтаж должен проводиться только в

специализированных мастерских

Монтажи trebuie efectuat de un atelier

de specialitate

Subject to alteration without notice

Technische Änderungen vorbehalten

Reservadas modificaciones técnicas

Sous réserve de modifications techniques

Con riserva di apportate modifiche tecniche

Reservamos-nos o direito a alterações técnicas

Technische wijzigingen voorbehouden

Med förbehåll för tekniske ändringar

Teknische forendringer forbeholdes

Med reservation för tekniska ändringar

Tekniset muutokset pidätetään

Technické zmeny vyhrazený

A változtatások technika jogát fenntartjuk

Zmiany techniczne zastrzeżone

Етпудадорудеда уа адауеуе

Техник дејіжікікер уарпа һаккі сакідіт


Мы оставаем за собой право на

технические изменения

Ne rezervăm dreptul la modificări tehnice

GIS1 Retention: 27.60.35

GB	INSTALLATION INSTRUCTION COMMUNICATION CONSOLE
D	EINBAUANLEITUNG KOMMUNIKATIONSKONSOLE
E	INSTRUCCIONES DE MONTAJE CONSOLA DE FUNCIONES DE COMUNICACIÓN
F	INSTRUCTIONS DE MONTAGE CONSOLE DE COMMUNICATION
I	ISTRUZIONI DI MONTAGGIO TERMINALE DI COMUNICAZIONE
P	INSTRUÇÕES DE MONTAGEM CONSOLA DE COMUNICAÇÃO
NL	INBOUW-INSTRUCTIE COMMUNICATIECONSOLE
DK	MONTÉRINGSVEJLEDNING KOMMUNIKATIONSKONSOLL
N	MONTÉRINGSVEJLEDNING KOMMUNIKATIONSKONSOLL
S	MONTÉRINGSANVISNING KOMMUNIKATIONSKONSOLL
SF	ASENNUSOHJE KOMMUNIKOINTIKONSOLLI
CZ	NÁVOD K MONTÁŽI KOMUNIKAČNÍ KONZOLA
H	BESZERELÉSI UTASÍTÁSA KOMMUNIKÁCIÓS KONZOL
PL	INSTRUKCJA MONTAŻU KONZOLA KOMUNIKACYJNA
GR	ΤΟΠΟΘΕΤΗΣΗ ΚΟΝΣΟΛΑ ΕΠΙΚΟΙΝΩΝΙΑΣ
TR	MONTAJ TALİMATLARI İLETİŞİM KONSOLU
RUS	ИНСТРУКЦИЯ ПО МОНТАЖУ ПАНЕЛЬ КОММУНИКАЦИИ
RO	MONTAJ TALIMATLARI CONSOLA COMUNICATII
SKBMSJ 025B75 AA	
HM02 E 12402219 000	
14/12/2010	
1/8	

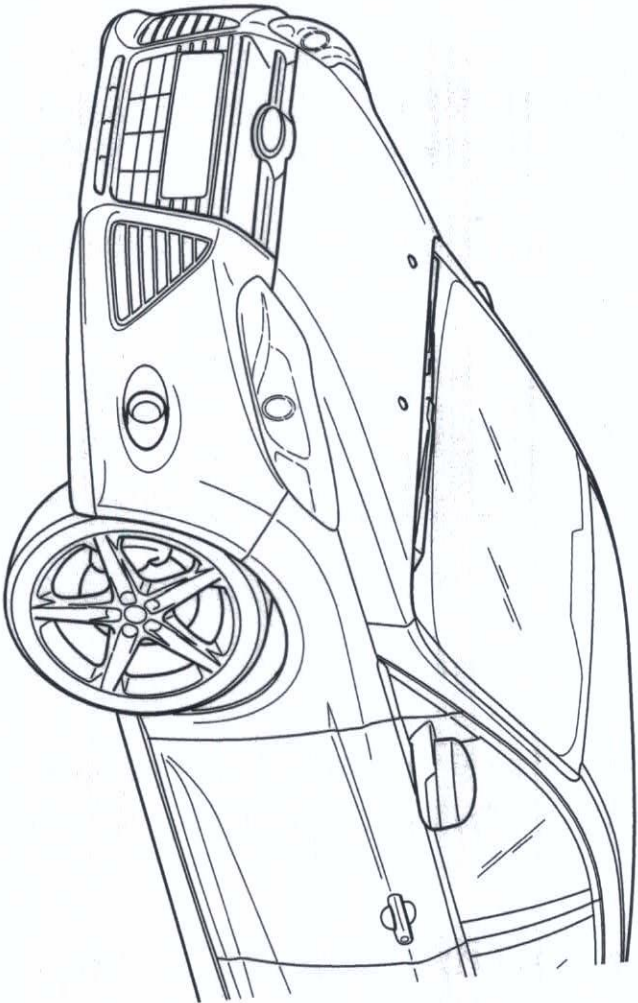

FOCUS 12/2010 ➡

2/8

SKBM5J 025B75 AA

HMM2 E 12402219 000

© Copyright Ford 2010



				
(GB) Location/Position Arrow (D) Positionspfeil (E) Flecha de posición (F) Flèche de Position (I) Freccia di posizione (P) Flexa de posição (NL) Lokatie/Positie pijl (DK) Lokaliseringspil (N) Positionspil (S) Positionpil (SF) Paikannusnuoli (CZ) Šipka na pozici (H) Helyzetjelző nyíl (PL) Strzałka położenia (GR) Βέλος θέσης (TR) Konum oku (RUS) Стрелка положения (RO) Săgeată de poziție	(GB) Movement Arrow (D) Bewegungspfeil (E) Flecha de movimiento (F) Flèche de mouvement (I) Freccia di movimento (P) Flexa de movimento (NL) Richtingspijl (DK) Bevægelsespil (N) Rørelsepil (S) Likesuntanuoli (SF) Šipka pohybu (CZ) Mozgáshányjelző nyíl (H) Strzałka kierunku ruchu (PL) Bêłoc kłrowc (GR) Hareket oku (TR) Strelka xoda (RUS) Săgeată de mișcare	(GB) Connect (D) Verbinden (E) Conectar (F) Raccorder (I) Collegare (P) Ligar (NL) Aansluiten (DK) Kobles (N) Tilkopling (S) Anslut (SF) Yhdiststä (CZ) Spojit (H) Kapcsolja össze (PL) Polaczyć (GR) Süvbeon (TR) Birleştirmek (RUS) Соединить (RO) Conectare	(GB) Correct (D) Richtig (E) Correcto (F) Correct (I) Giusto (P) Certo (NL) Goed (DK) Rigtig (N) Riktig (S) Rätt (SF) Oikein (CZ) Správně (H) Helyes (PL) Prawidłowo (GR) Σωστό (TR) Doğru (RUS) Правильно (RO) Corect	(GB) Warning (D) Achtung (E) Atención (F) Attention (I) Attenzione (P) Atenção (NL) Let op (DK) Bemærk (N) Pass på (S) Varning (SF) Huomio (CZ) Pozor (H) Figyelem (PL) Uwaga (GR) Προοχή (TR) Dikkat (RUS) Внимание (RO) Atenție



SKBM5J 025B75 AA

HM02 E 12402219 000

© Copyright Ford 2010

3/8



- (GB) See Operating Instructions
 (D) Siehe Bedienungsanleitung
 (E) Ver Instrucciones de Uso
 (F) Voir Notice d'utilisation
 (I) Vedere Istruzioni per l'uso
 (P) Cf. Instruções de operação
 (NL) Kijkten naar Gebruiksaanwijzing
 (DK) Se Betjeningsvejledning
 (N) Se Betjeningsanvisning
 (S) Se Betjeningsanvisning
 (SF) Katso Käyttöohje
 (CZ) Viz Návod k obsluze
 (H) Lásd Kezelési Utasítás
 (PL) Patrz Instrukcja obsługi
 (GR) Βλέπε Οδηγίες Χειρισμού
 (TR) Bakınız Kullanım talimatı
 (RUS) Смотрите Инструкцию по эксплуатации
 (RO) Vezi instrucțiunile de exploatare





- (GB) Tape up
 (D) Mit Klebeband befestigen
 (E) Fijar con cinta adhesiva
 (F) Fixer avec ruban adhésif
 (I) Fissare con nastro adesivo
 (P) Sujectar com fita adesiva
 (NL) Vastzetten met tape
 (DK) Fastgøres med tape
 (N) Fast fast med klebebånd
 (S) Fästet med tejp
 (SF) Kiinnitys teipillä
 (CZ) Upevnit lepicí páskou
 (H) Rögzítse ragasztószalaggal
 (PL) Umocować taśmą
 (GR) Στερεώση με κολλητική ταινία
 (TR) Yapıştırıcı bant ile tutturunuz
 (RUS) Укрепить клеемкой лентой
 (RO) Fixare cu bandă adezivă





- (GB) Use Torx
 (D) Torx verwenden
 (E) Emplear Torx
 (F) Utiliser vis du type Torx
 (I) Usare Torx
 (P) Utilizar Torx
 (NL) Torx gebruiken
 (DK) Anvend Torx
 (N) Bruk en Torx
 (S) Använd torx
 (SF) Käytä Torxia
 (CZ) Použít šroub Torx
 (H) Használjon torx-csavar
 (PL) Stosować śruby z theme o gnieździe Torx
 (GR) Χρησιμοποιείτε Torx
 (TR) Torx kullanınız
 (RUS) Использовать винты с потайной головкой торкс
 (RO) A se folosi șurubelniță torx


4/8	SKBM5J 025B75 AA	HM02 E 12402219 000	© Copyright Ford 2010	
-----	------------------	---------------------	-----------------------	--

A 1x	B 1x
C 3x	SKBMSJ 025B75 AA HM02 E 12402219 000 © Copyright Ford 2010 5/8

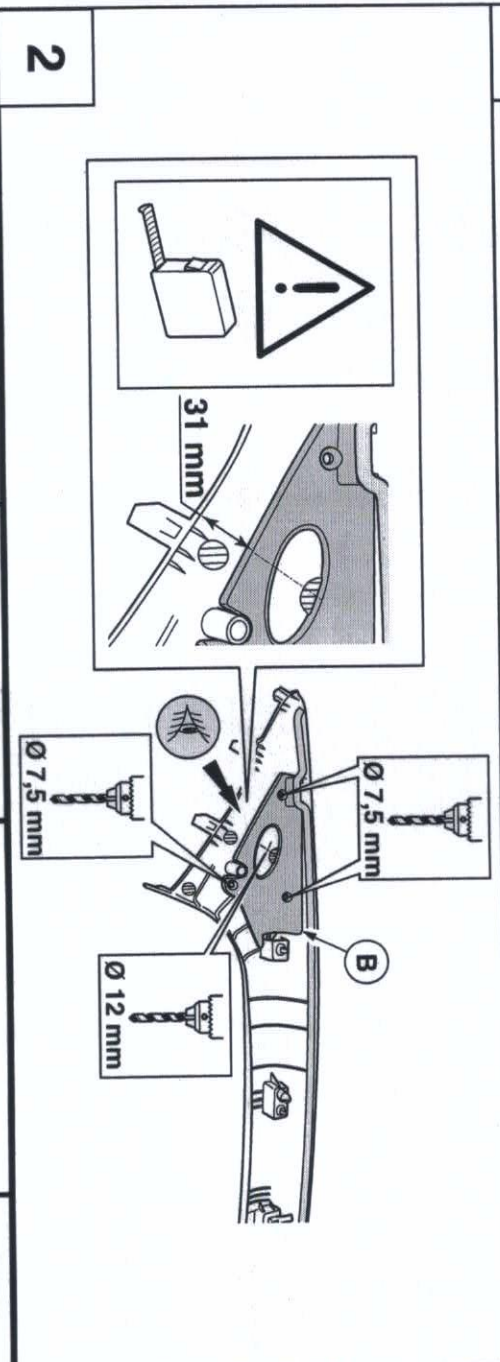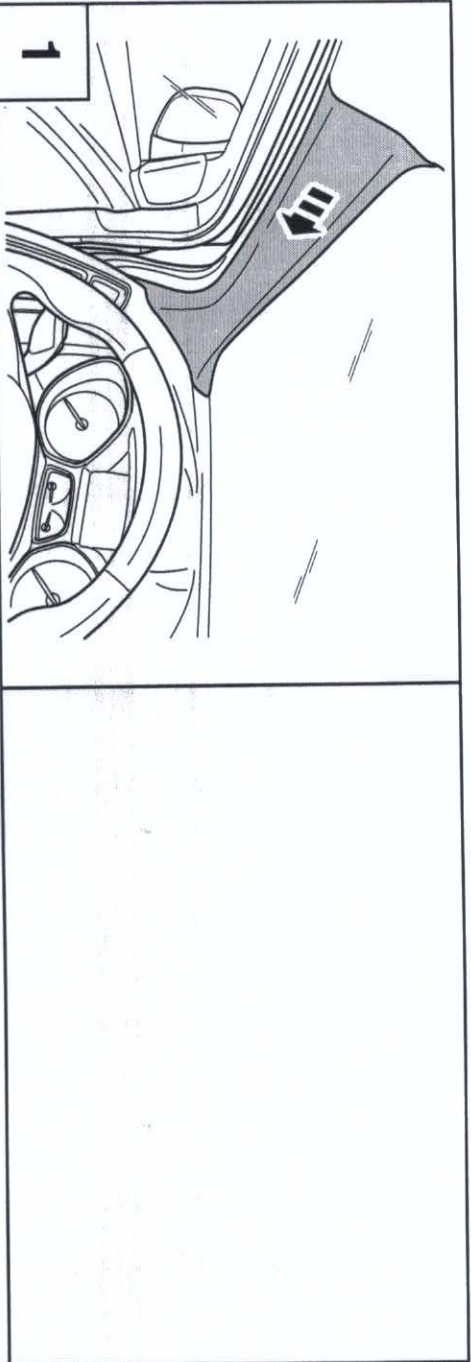

6/8	SKBM5J 025B75 AA	HM02 E 12402219 000	© Copyright Ford 2010	
-----	------------------	---------------------	-----------------------	--

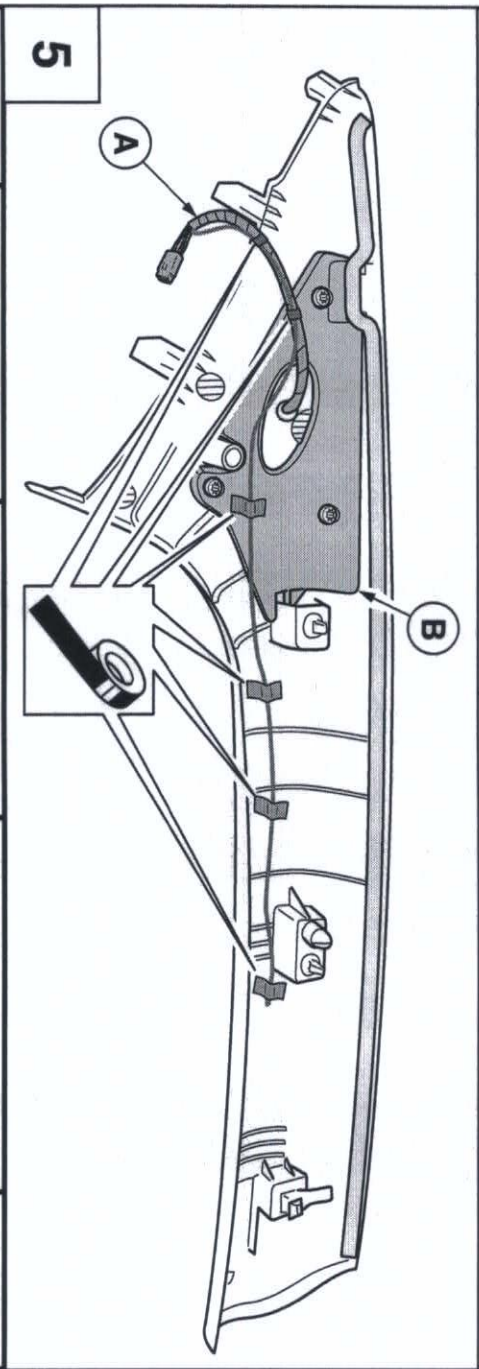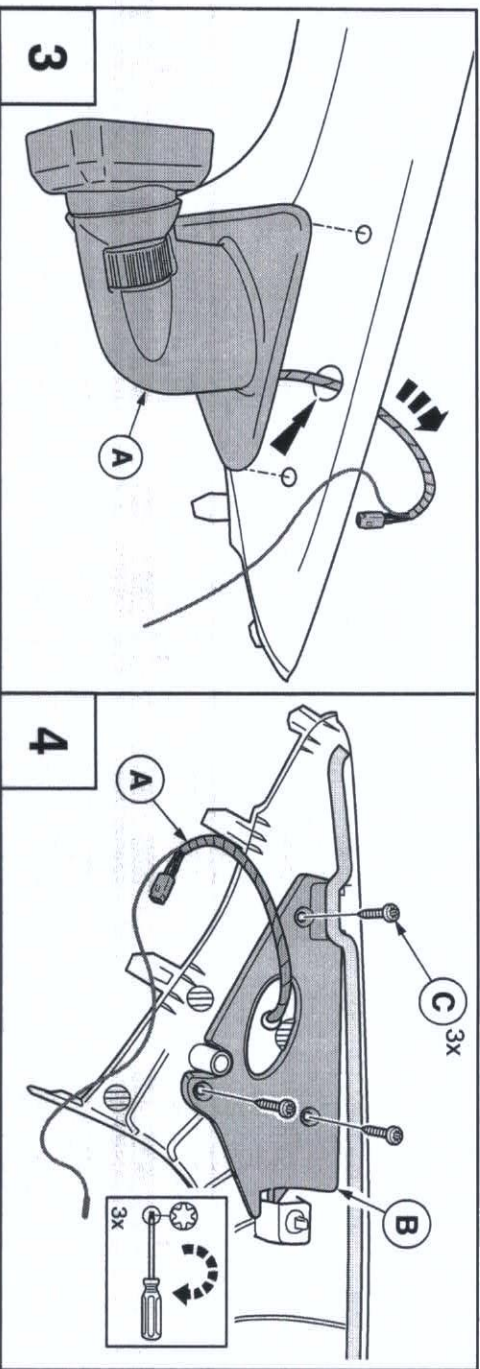

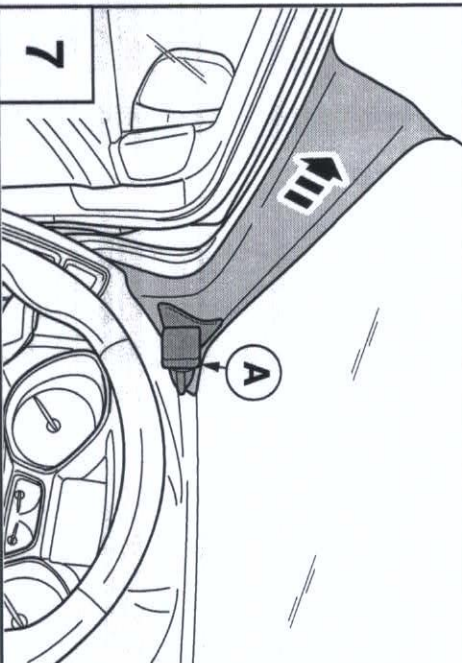			
   SKAM5J 14F666 A *			
6			
			
7			
8/8	SKBM5J 025B75 AA	HM02 E 12363980 000	© Copyright Ford 2010
			