

3026 FITTING INSTRUCTIONS


1. Place the sun visor on the vehicle. Place the side brackets 720 mm from the bottom of the inside corner of the door pillar. Mark the hole positions. Drill the holes which are inside of the door pillar with 3,0 mm bit and the holes which are on the pillar with 3,5 mm bit.
2. Mount the visor / side brackets on the vehicle (note the 4,8 x 20mm screws should be mounted on the pillar), adjust the angle of the visor and tighten all screws.
3. Fit the cover hats on the screws and nut cover hats.
4. Mount the warning label on a place where the driver can see it.

Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h.
If you drive constantly faster than 130 km/h the visor may tear off!

ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.

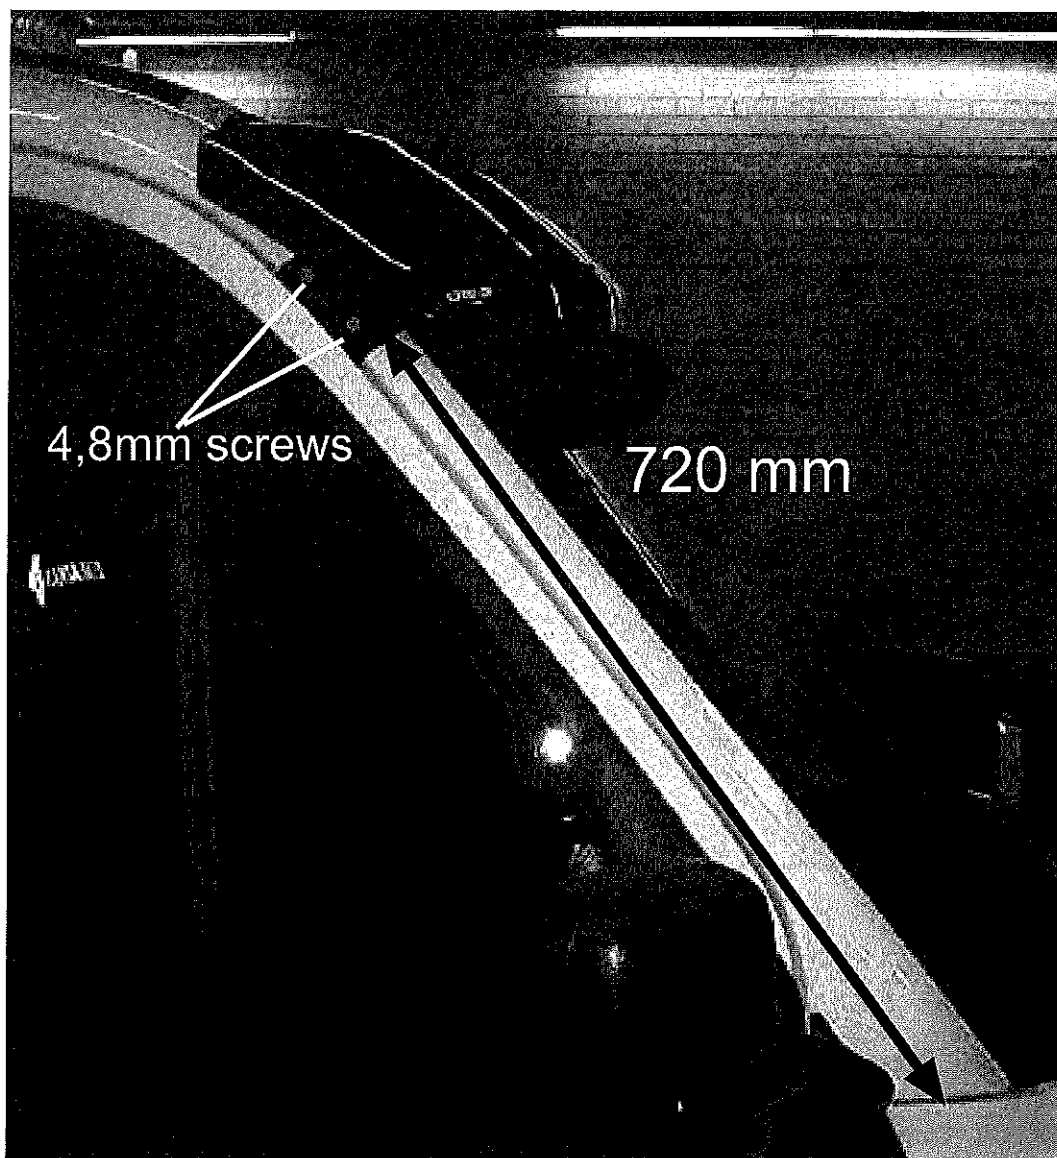

Fitting instructions for 3033 FORD TRANSIT 2000-

1. Remove the side brackets from the center bar and place it on the door pillar. Measure the correct height (680-685mm) and drill the holes with 3,5mm bit.
2. Fit the side brackets on the vehicle as follows:
 - 2.1. use 4,8 x 19mm screws to fit side bracket from the holes which are behind the door pillar
 - 2.2. use 4,8 x 25mm screws to fit the side bracket from the holes which are on top of the door pillar.
3. Fit the visor on the side brackets. Adjust the visors angle and tighten all screws.
4. Fit the nut cover hats and cover collar hats.
5. Mount the warning label on a place where the driver can see it.

Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h.
If you drive constantly faster than 130 km/h the visor may tear off!

**ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO
RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.**




M-B VITO / VIANO Sun Visor Mounting instructions

The box should contain following parts:

- | | | | |
|-------------------------|-------|-------------------|-------|
| 1. Premounted sun visor | 1 pc | 2. Roof brackets | 2 pcs |
| 3. 3mm rubber washer | 4 pcs | 4. M 6x16 screws | 4 pcs |
| 5. M 6 x 18mm washer | 4 pcs | 6. Nut cover hat | 8 pcs |
| 7. Cover hat for collar | 8 pcs | 8. Warning labels | 3 pcs |

1. Open the screws from both ends of the sun visor.
2. Glide in the roof bracket between the rubber washer and the center brackets and mount the screws back.
3. Remove the plastic screws from the roof as shown on the photo.

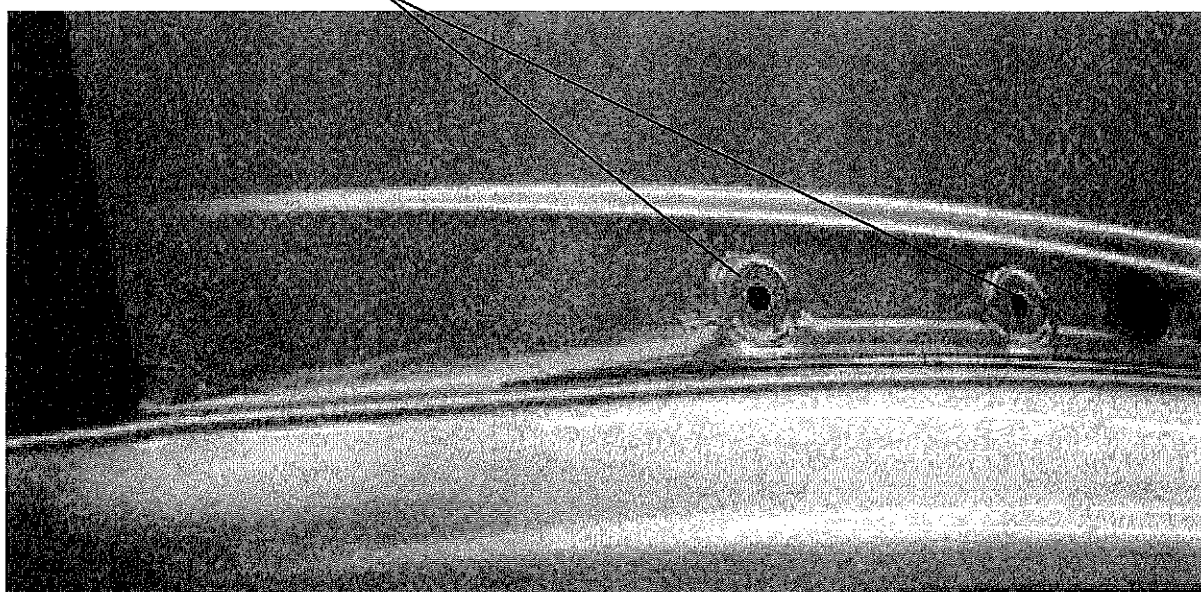

4. Mount the visor on the roof with the M 6 x 16mm screws, washers and rubber washers. (place the rubber washers between the roof and the roof bracket).
5. Check the cross measure of the visor and tighten all screws.
6. Mount the cover hats.
7. Mount the warning label on a place where the driver can see it.

Remember to tighten all screws after few hours of drive!

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h.
If you drive constantly faster than 130 km/h the visor may tear off!

**ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO
RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.**

3000 SERIE SUN VISOR FITTING INSTRUCTIONS


1. Place the sun visor on the vehicles door pilars. Mark the hole positions. Drill the holes with 3,0 mm bit.
2. Mount the visor / side brackets on the vehicle adjust the angle of the visor and tighten all screws.
3. Fit the cover hats on the screws and nut cover hats.
4. Mount the warning label on a place where the driver can see it.

Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h.
If you drive constantly faster than 130 km/h the visor may tear off!

**ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO
RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.**

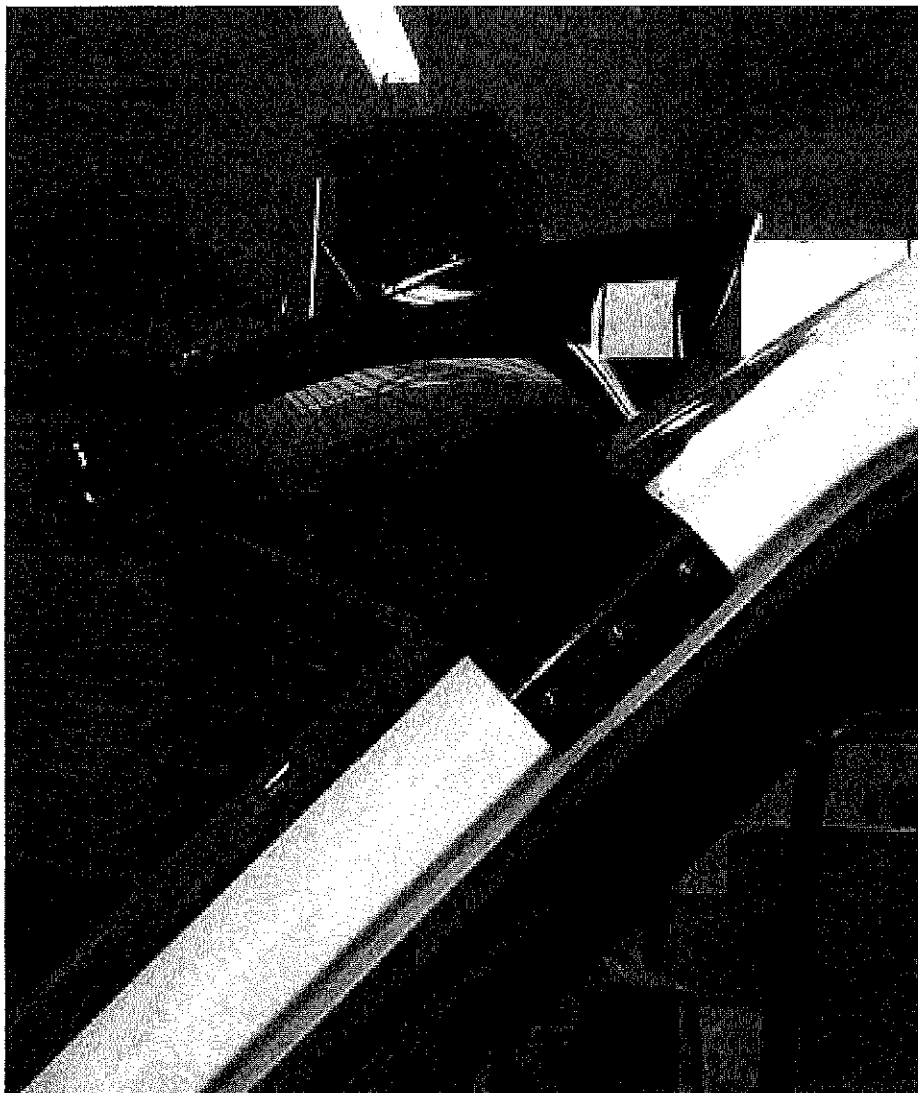


**VEPRO OY**


3065 IVECO DAILY 04/2014- FITTING INSTRUCTIONS

1. Remove the plastic bag from the end of the sun visor.

2. Remove the side bracket from the sun visor (marked with white circle)

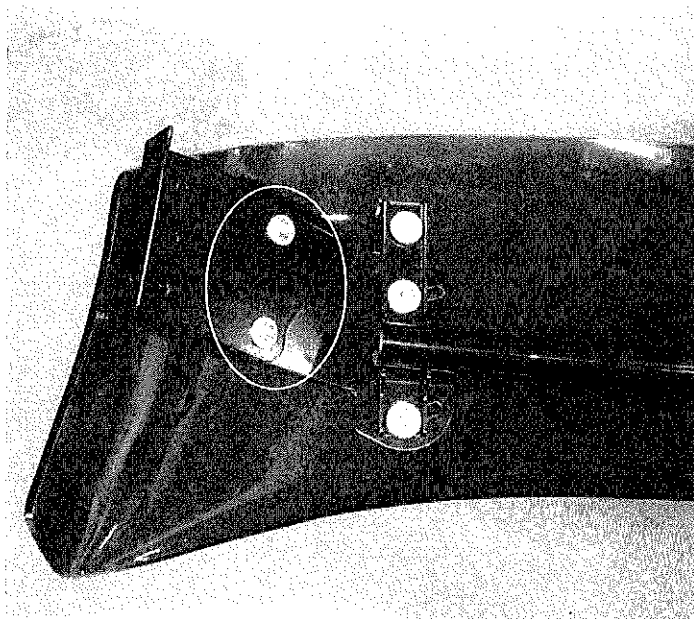


3. Place the side bracket on the A-pillar 655mm from the bottom line of the door pillar and mark the hole positions (remember to mark all mounting holes of the sidebracket).

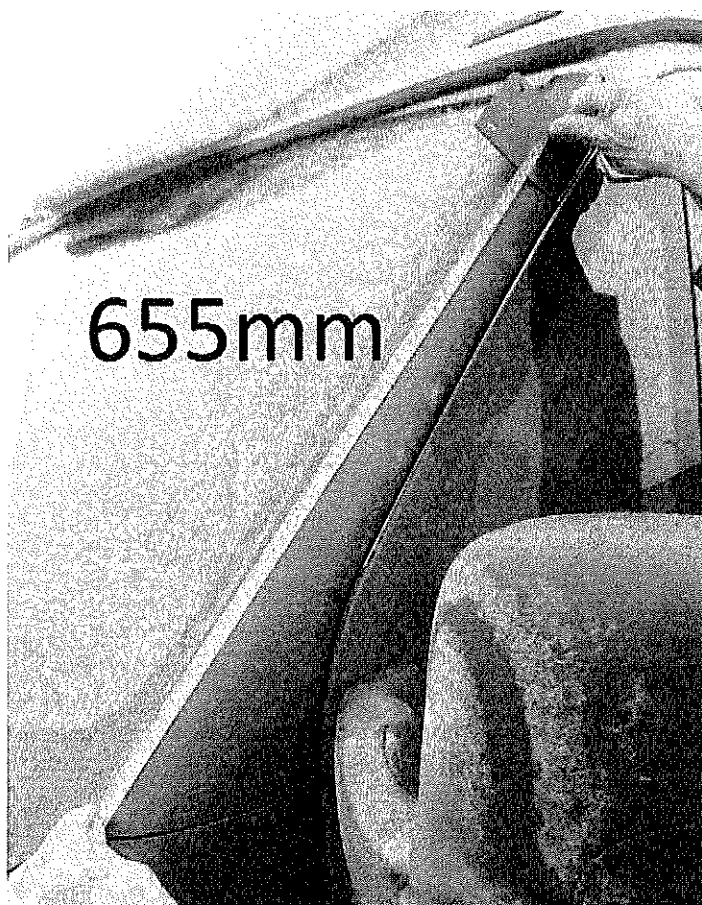

**VEPRO OY**


3065 IVECO DAILY 04/2014- FITTING INSTRUCTIONS

4. Drill the holes with 3,5 mm bit.

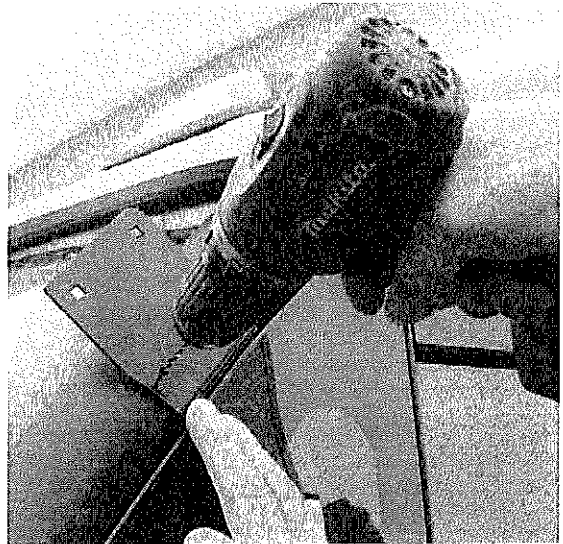

5. Mount the side brackets on the vehicle.

Mount the visor back on the side brackets and tighten all screws.

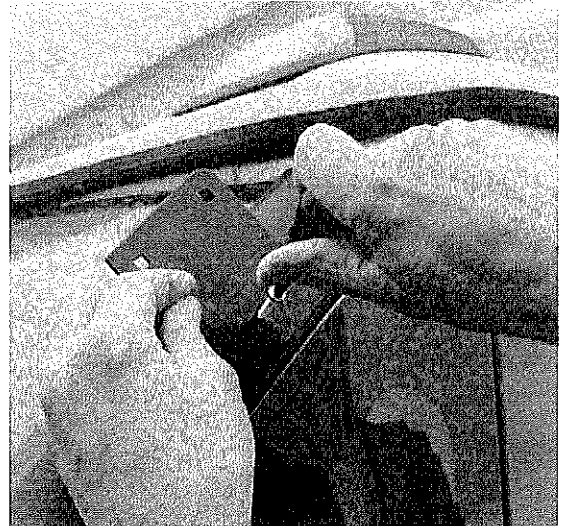

6. Fit the cover hats on the screws and nut cover hats.

7. Mount the warning label on a place where the driver can see it.

Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h.
If you drive constantly faster than 130 km/h the visor may tear off!

**ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO
RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.**

Osoite/Address
Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765




Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554
FI09001798

**VEPRO OY**

3052 MB SPRINTER 05/2006- / VW CRAFTER FITTING INSTRUCTIONS

To mount this product you will need Sikaflex 252 glue, Sikaflex primer and Sikaflex cleaner (not supplied with the kit).

1. Place the side bracket on the A-pilar so that the vertical side follows the innerside of the a-pilar and the top side follows the line on the a-pilar.
2. Mark the hole positions and drill the holes with 4mm bit.
3. Mark the area of the side bracket. Clean the mounting area with sikaflex cleaner and the backside of the bracket.
4. Apply sikaflex primer on the cleaned areas and let it react for 15 minutes.
5. Apply sikaflex 252 on the backside of the side bracket and place it on the a-pilar.
6. Apply some glue into the holes and mount the sidebracket on the pilar with 4,8x19mm screws.
7. Mount the main bracket on the side brackets by using the 8mm washers and nuts.
8. Mount the visor on the main bracket according to the drawing.

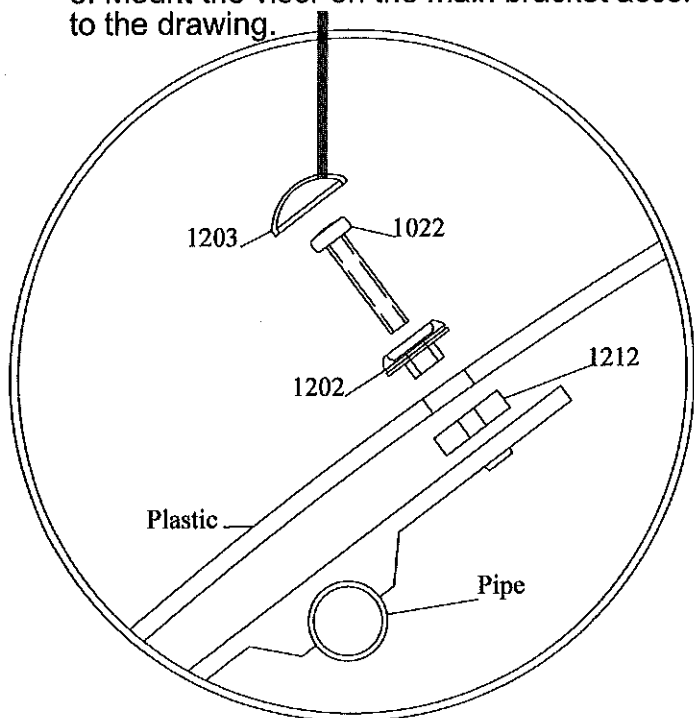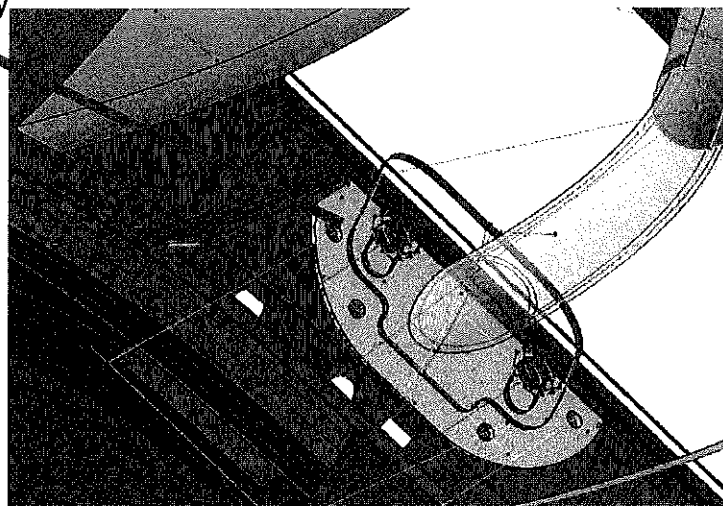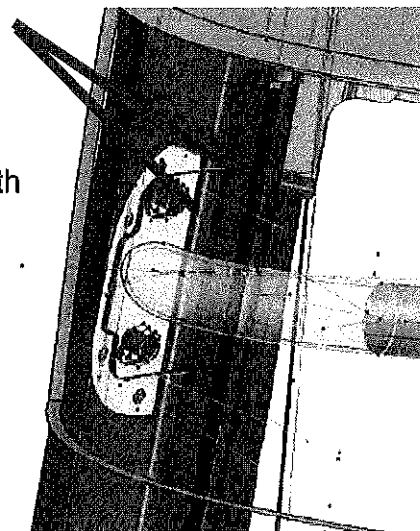

9. Mount the warning label on a place where the driver can see it. Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h.
If you drive constantly faster than 130 km/h the visor may tear off!

**ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO
RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.**

Osoite/Address
Tehtaankatu 21,
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765


Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554
FI09001798

**VEPRO OY**



3052 MB SPRINTER 05/2006- / VW CRAFTER ASENNUSOHJE

Asentaaksesi tämän tuotteen tarvitset Sikaflex 252 liimaa, Sikaflex primeria ja Sikaflex cleaneriä (ei sisälly pakkaukseen).

1. Aseta sivukiinnike A-pilarin päälle siten, että pystysuora reuna seuraa A-pilarin sisäreunaa ja yläreuna A-pilarin saumaa.
2. Merkkää reikien paikat ja poraa reiät 4mm poran terällä.
3. Rajaa kiinnitysalue esim. maalarinteipillä. Puhdista rajattu alue ja kiinnikkeen takapinta Sikaflex cleanerillä.
4. Pyyhi rajattu alue ja kiinnikkeen takapinta Sikaflex primerilla ja anna sen vaikuttaa 15 minuuttia.
5. Laita Sikaflex 252 liimaa kiinnikkeen takapintaan ja aseta se A-pilarin päälle.
6. Laita liimaa asennusreikiin ja kiinnitä sivupelti 4,8x19mm ruuveilla.
7. Asenna keskikiinnike kuvan mukaisesti.

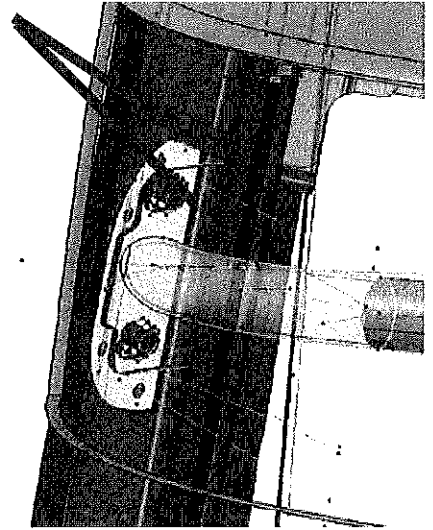

8. Asenna aurinkosuoja kiinnitysrautaan kuvan mukaisesti.

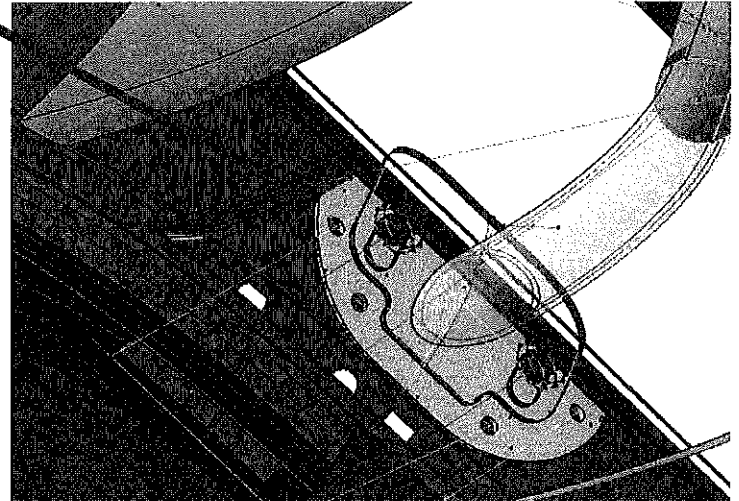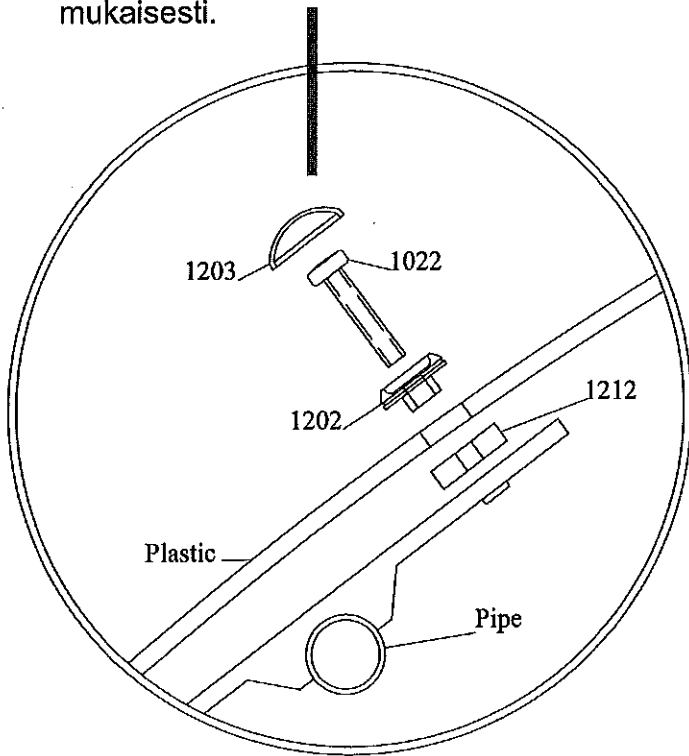

9. Kiinnitä varoitustarra paikkaan, josta kuljettaja näkee sen. Muista kiristää ruuvit muutaman tunnin ajan jälkeen ja kuuden kuukauden välein.

VAROITUS!

Aurinkosuojalla varustetun ajoneuvon enimmäisnopeus on 130 km/h. Jatkuva yli 130km/h nopeus voi aiheuttaa aurinkosuojan repeytymisen.

VALMISTAJA EI VASTAA VAHINGOISTA EIKÄ KORVAUKSISTA, JOTKA AIHEUTUVAT TÄMÄN VAROITUKSEN NOUDATTAMATTA JÄTTÄMISESTÄ.

Osoite/Address
Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554 FI09001798

**VEPRO OY**

3063 DUCATO / JUMPER / BOXER 2007- FITTING INSTRUCTIONS

To mount this product you will need Sikaflex 252 glue, Sikaflex primer and Sikaflex cleaner (not supplied with the kit).

1. Place the side bracket on the A-pilar so that the bottom side follows the vertical line on the A-pilar and there is a 5mm gap between outer side of the bracket and the door opening as shown on the picture.

2. Mark the hole positions and drill the holes with 4,0mm bit.

3. Mark the area of the side bracket. Clean the area and the backside of the bracket with cleaner.

4. Apply the primer to the cleaned areas and let it react for 15 minutes.

5. Apply Sikaflex 252 on the backside of the side bracket and place it on the a-pilar (at least 3 wide stripes).

6. Apply Sikaflex 252 into the holes and mount the side bracket on the pilar with 4,8x19mm screws.

7. Seal the sides of the mounting plate with Sikaflex.

8. Mount the main bracket on the side brackets by using the 8mm spring washers and nuts.

9. Glue the foam tape on both ends of the main bracket as shown on the picture.




10. Mount the visor on the main bracket according to the drawing.

11. Mount the warning label on a place where the driver can see it. Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h. If you drive constantly faster than 130 km/h the visor may tear off!

ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.

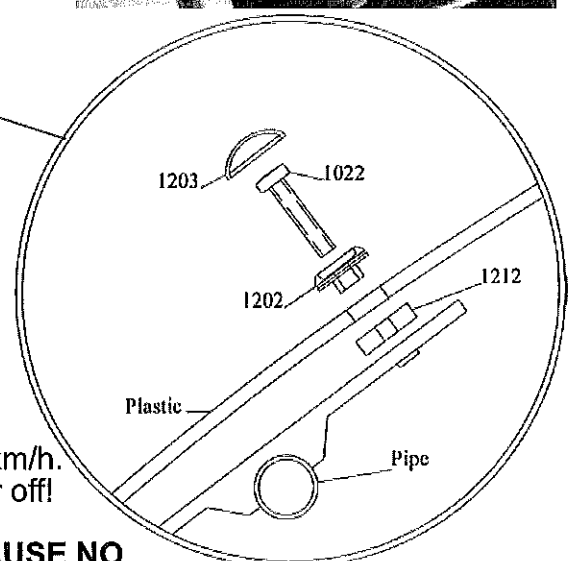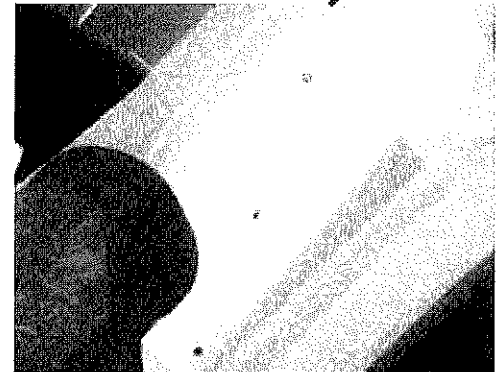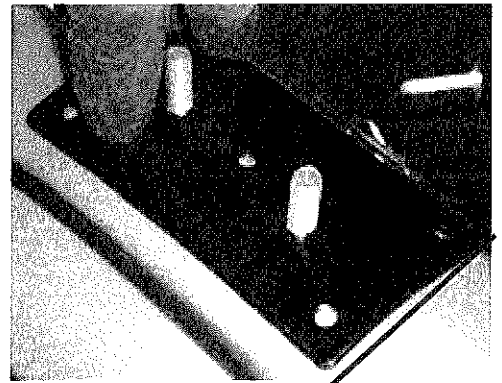

Osoite/Address
Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000






Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554
FI09001798

**VEPRO OY****3063 DUCATO / JUMPER / BOXER 2007-
ASENNUSOHJE**

Asentaaksesi tämän tuotteen tarvitset Sikaflex 252 liimaa, Sikaflex primeria ja Sikaflex cleaneriä (ei sisälly pakkaukseen).

1. Aseta sivukiinnike A-pilarin päälle siten, että alareuna seuraa A-pilarin saumaa ja kiinnikkeen pystysuoran ulkoreunan ja ovenreunan väliin jää 5mm:n väli kuten kuvassa.
2. Merkkää reikien paikat ja poraa reiät 4mm poranterällä.
3. Rajaa kiinnitysalue esim. maalarinteipillä. Puhdista rajattu alue ja kiinnikkeen takapinta Sikaflex cleanerillä.
4. Pyyhi rajattu alue ja kiinnikkeen takapinta Sikaflex primerilla ja anna sen vaikuttaa 15 minuuttia.
5. Laita Sikaflex 252 liimaa kiinnikkeen takapintaan ja aseta se A-pilarin päälle.
6. Laita liimaa asennusreikiin ja kiinnitä sivupelti 4,8x19mm ruuveilla.
7. Saumaa kiinnikkeen reunat liimalla.
8. Asenna keskikiinnike sivukiinnikeisiin (8mm muttereilla ja jousialuslevyillä).
9. Liimaa pehmusteteippi raudan päälle kuvanmukaisesti.
10. Asenna aurinkosuoja kiinnitysrautaan kuvanmukaisesti.
11. Kiinnitä varoitustarra paikkaan, josta kuljettaja näkee sen. Muista kiristää ruuvit muutaman tunnin ajon jälkeen ja kuuden kuukauden välein.

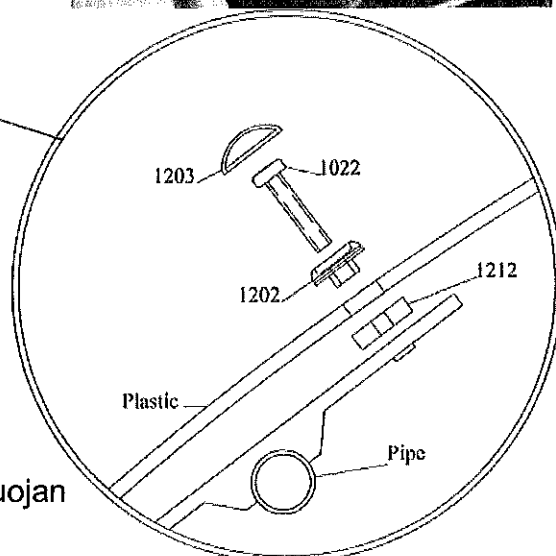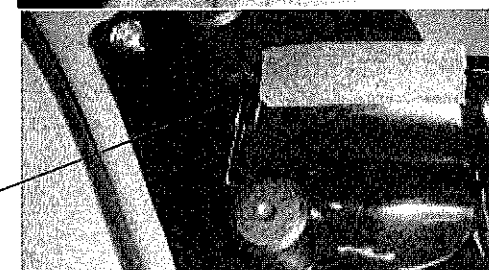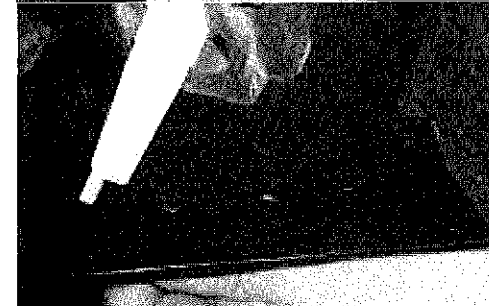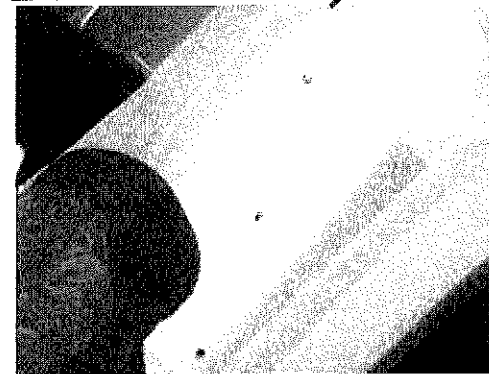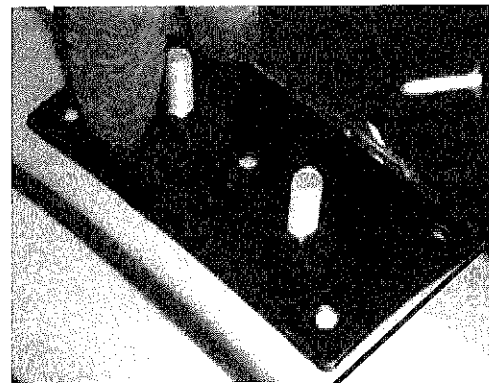**VAROITUS!**

Aurinkosuojalla varustetun ajoneuvon enimmäisnopeus on 130 km/h. Jatkuva yli 130km/h nopeus voi aiheuttaa aurinkosuojan repeytymisen.

VALMISTAJA EI VASTAA VAHINGOISTA EIKÄ KORVAUKSISTA, JOTKA AIHEUTUVAT TÄMÄN VAROITUKSEN NOUDATTAMATTA JÄTTÄMISESTÄ.

Osoite/Address
Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554
FI09001798

**VEPRO OY**

3125 VW T5 / TRANSPORTER 2010- / T6, ALL MODELS ** FITTING INSTRUCTIONS


To mount this product you will need Sikaflex 252 glue, Sikaflex primer and Sikaflex cleaner (not supplied with the kit).

1. Place the side bracket on the A-pillar so that the bottom side is 590mm $\pm$ 5mm from the bottom line of the A-pillar (*picture 1*) and there is 12mm gap above and 10mm gap below between inner side of the bracket and the A-pillar (*picture 2*). Check that the hole in the middle of side bracket is toward window.


2. Mark the hole positions and drill the holes with 4,0 mm bit.

3. Mark the area of the side bracket. Clean the area with cleaner and the backside of the bracket with cleaner.

4. Apply the primer on the cleaned areas and let it react for 15 minutes.

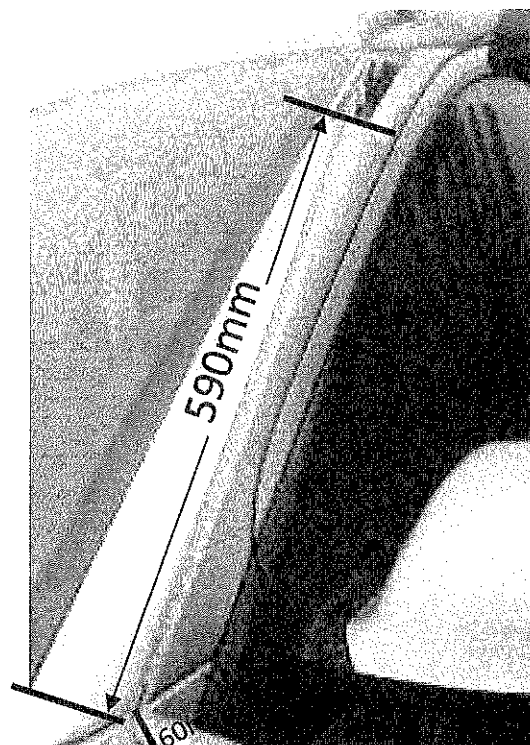

picture 1

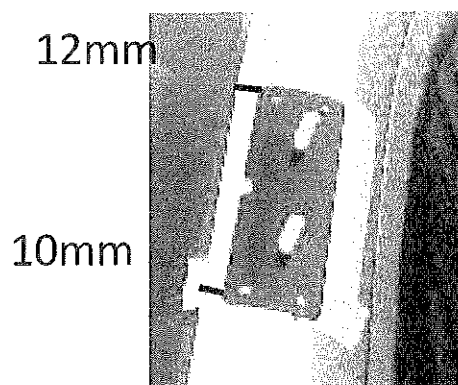

picture 2

Address

Tehäankatu 21
11710 RIIHIMÄKI
FINLAND

Telephone

+ 358 19 724 00

Fax

+ 358 19 720 765

mail@vepro.fi

www.vepro.fi

FI09001798

**VEPRO OY**

3125 VW T5 / TRANSPORTER 2010- / T6, ALL MODELS ** FITTING INSTRUCTIONS

5. Apply Sikaflex 252 on the backside of the side bracket and place it on the A-pillar (at least 3 wide stripes). *(picture 3)*

6. Apply Sikaflex 252 into the holes and mount the side bracket on the A-pillar with 4,8x19mm screws.




picture 3

7. Seal the sides of the mounting plate with Sikaflex.

8. Mount the main bracket on the side brackets by using the 8mm washers and nylock nuts.

9. Mount the visor on the main bracket according to the drawing. *(picture 4)*

10. Mount the warning label on a place where the driver can see it. Remember to tighten all screws after few hours drive and every 6 months.

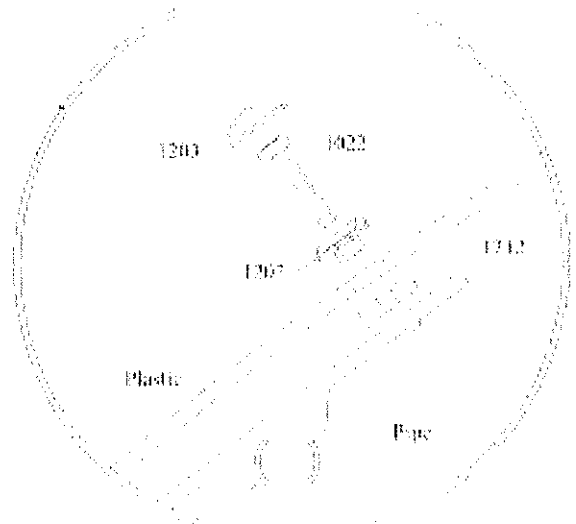

picture 4

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h. If you drive constantly faster than 130 km/h the visor may tear off!

**ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE
NO RESPONSIBILITY TO THE MANUFACTURER OF ANY
COSTS AND DAMAGES.**

Address
Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND

Telephone
+ 358 19 724 00

Fax
+ 358 19 720 765

mail@vepro.fi
www.vepro.fi
FI09001798

**VEPRO OY**

3125 VW T5 / TRANSPORTER 2010- / T6, ALL MODELS ** ASENNUSOHJE


**Asentaaksesi tämän tuotteen tarvitset Sikaflex 252 liimaa,
Sikaflex primeria ja Sikaflex cleaneriä (ei sisälly pakkaukseen).**

1. Aseta sivukiinnike A-pilarin päälle siten, että kiinnikkeen alareunasta on 590mm $\pm$ 5mm A-pilarin alareunaan (kuva 1) ja kiinnikkeen sisäreuna on 12mm yläpuolelta ja 10mm alapuolelta A-pilarin reunasta (kuva 2). Tarkista, että kiinnikkeen keskellä oleva kolo on kohti tuulilasia.


2. Merkkää reikien paikat ja poraa reiät 4mm poranterällä.

3. Rajaa kiinnitysalue esim. maalarinteipillä. Puhdista rajattu alue ja kiinnikkeen takapinta Sikaflex cleanerillä.

4. Pyyhi rajattu alue ja kiinnikkeen takapinta Sikaflex primerilla ja anna sen vaikuttaa 15 minuuttia.

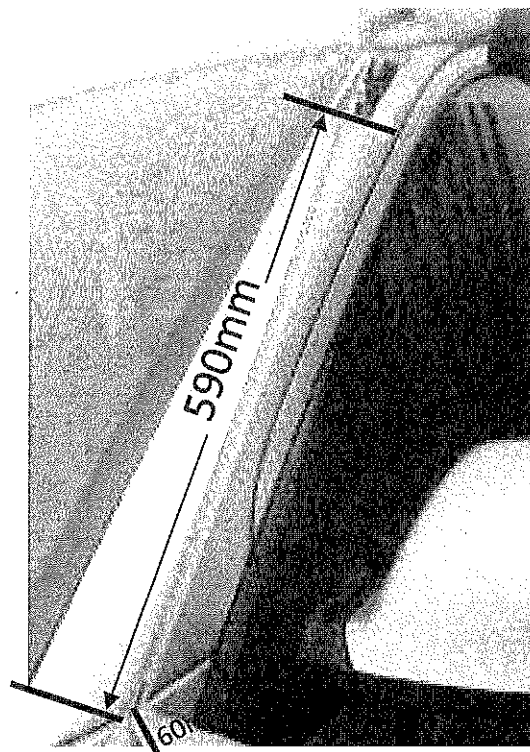

kuva 1

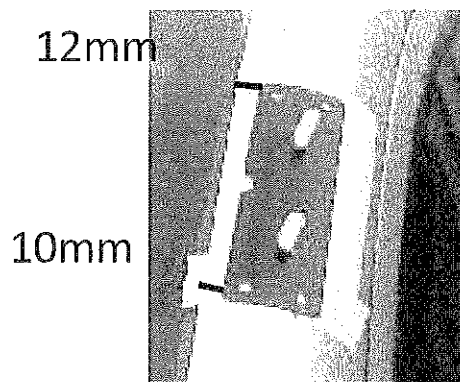

kuva 2

Address

Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND

Telephone

+ 358 19 724 00

Fax

+ 358 19 720 765

mail@vepro.fi

www.vepro.fi

FI09001798

**VEPRO OY**

3125 VW T5 / TRANSPORTER 2010- / T6, ALL MODELS ** ASENNUSOHJE

5. Laita Sikaflex 252 liimaa kiinnikkeen takapintaan ja aseta se A-pilarin päälle.
(kuva 3)

6. Laita liimaa asennusreikiin ja kiinnitä sivupelti 4,8x19mm ruuveilla.

7. Saumaa kiinnikkeen reunat liimalla.


8. Asenna keskikiinnike sivukiinnikkeisiin (8mm muttereilla ja jousialuslevyillä).

9. Asenna aurinkosuoja kiinnitysrautaan kuvanmukaisesti. (kuva 4)

10. Kiinnitä varoitustarra paikkaan, josta kuljettaja näkee sen. Muista kiristää ruuvit muutaman tunnin ajon jälkeen ja kuuden kuukauden välein.



kuva 3

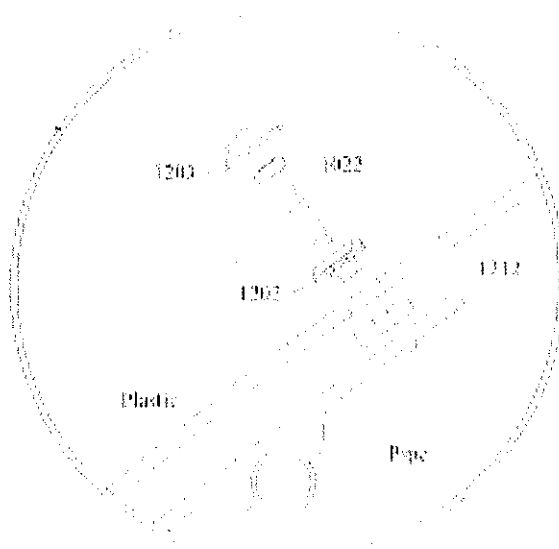

kuva 4

VAROITUS!

Aurinkosuojalla varustetun ajoneuvon enimmäisnopeus on 130 km/h. Jatkuva yli 130km/h nopeus voi aiheuttaa aurinkosuojan repeytymisen.

**VALMISTAJA EI VASTAA VAHINGOISTA EIKÄ KORVAUKSISTA, JOTKA
AIHEUTUVAT TÄMÄN VAROITUKSEN NOUDATTAMATTA JÄTTÄMISESTÄ.**

Address

Tehtaankatu 21
11730 RIIHIMÄKI
FINLAND

Telephone

+ 358 19 724 00

Fax

+ 358 19 720 765

mail@vepro.fi

www.vepro.fi

FI09001798

**VEPRO OY**

3064 NV400 / MOVANO / MASTER 2010- FITTING INSTRUCTIONS

To mount this product you will need Sikaflex 252 glue, Sikaflex primer and Sikaflex cleaner (not supplied with the kit).

1. Place the side bracket on the A-pillar so that the bottom side is 485-488mm from the bottom of the A-pillar as shown on the picture.

2. Mark the hole positions and drill the holes with 4,0mm bit.

3. Mark the area of the side bracket. Clean the area and the backside of the bracket with cleaner.

4. Apply the primer to the cleaned areas and let it react for 15 minutes.

5. Apply Sikaflex 252 on the backside of the side bracket and place it on the a-pillar (at least 3 wide stripes).

6. Apply Sikaflex 252 into the holes and mount the side bracket on the pillar with 4,8x19mm screws.

7. Seal the sides of the mounting plate with Sikaflex.

8. Mount the main bracket on the side brackets by using the 8mm spring washers and nuts.

9. Glue the foam tape on both ends of the main bracket as shown on the picture.

10. Mount the visor on the main bracket according to the drawing.

11. Mount the warning label on a place where the driver can see it. Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h. If you drive constantly faster than 130 km/h the visor may tear off!


ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.

Osoite/Address
Tehtaankatu 21,
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554
FI09001798

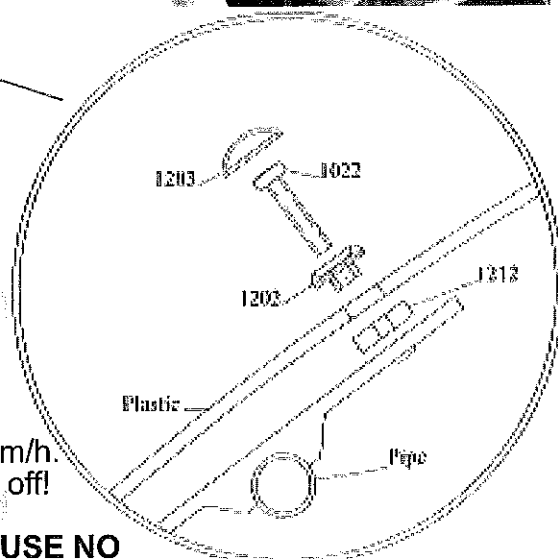485-488mm

**VEPRO OY****3064 NV400 / MOVANO / MASTER 2010-
ASENNUSOHJE****485-488mm**

Asentaaksesi tämän tuotteen tarvitset Sikaflex 252 liimaa, Sikaflex primeria ja Sikaflex cleaneriä (ei sisälly pakkaukseen).

1. Aseta sivukiinnike A-pilarin päälle siten, että alareuna on 485-488mm A-pilarin alareunasta kuten kuvassa.
2. Merkkää reikien paikat ja poraa reiät 4mm poranterällä.
3. Rajaa kiinnitysalue esim. maalarinteipillä. Puhdista rajattu alue ja kiinnikkeen takapinta Sikaflex cleanerillä.
4. Pyyhi rajattu alue ja kiinnikkeen takapinta Sikaflex primerilla ja anna sen vaikuttaa 15 minuuttia.
5. Laita Sikaflex 252 liimaa kiinnikkeen takapintaan ja aseta se A-pilarin päälle.
6. Laita liimaa asennusreikiin ja kiinnitä sivupelti 4,8x19mm ruuveilla.
7. Saumaa kiinnikkeen reunat liimalla.
8. Asenna keskikiinnike sivukiinnikeisiin (8mm muttereilla ja jousialuslevyillä).
9. Liimaa pehmusteteippi raudan päälle kuvanmukaisesti.
10. Asenna aurinkosuoja kiinnitysrautaan kuvanmukaisesti.

11. Kiinnitä varoitustarra paikkaan, josta kuljettaja näkee sen. Muista kiristää ruuvit muutaman tunnin ajon jälkeen ja kuuden kuukauden välein.

VAROITUS!

Aurinkosuojalla varustetun ajoneuvon enimmäisnopeus on 130 km/h. Jatkuva yli 130km/h nopeus voi aiheuttaa aurinkosuojan repeytymisen.

VALMISTAJA EI VASTAA VAHINGOISTA EIKÄ KORVAUKSISTA, JOTKA AIHEUTUVAT TÄMÄN VAROITUKSEN NOUDATTAMATTA JÄTTÄMISESTÄ.

Osoite/Address
Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND


Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765

Pankki/Bank



OKO 539602-254945
Sampo 800016-70104554

FI09001798

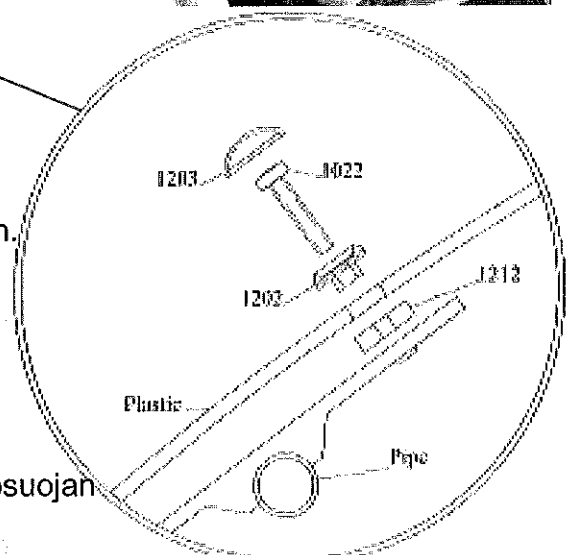



Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554 FI09001798

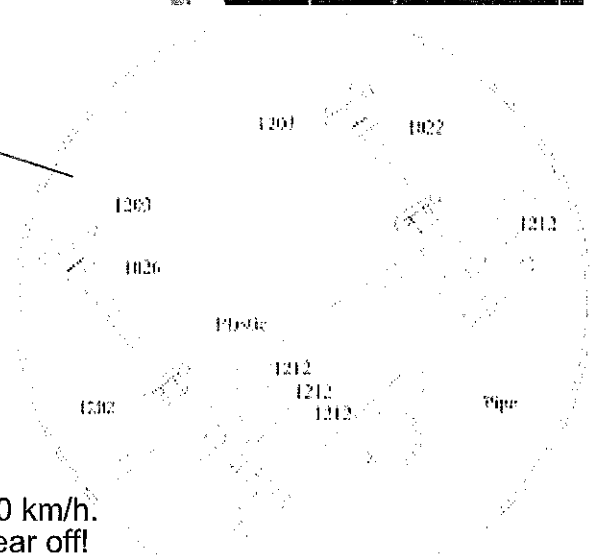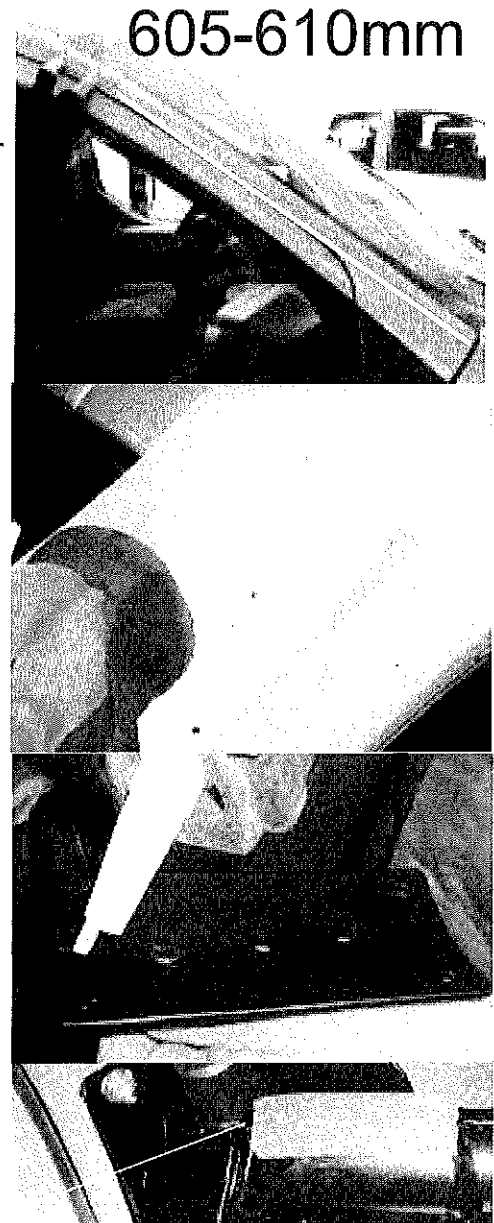



605-610mm



605-610mm

7. Saumaa kiinnikkeen reunat liimalla.

10. Asenna aurinkosuoja kiinnitysrautaan kuvanmukaisesti.

VALMISTAJA EI VASTAA VAHINGOISTA EIKÄ KORVAUKSISTA, JOTKA AIHEUTUVAT TÄMÄN VAROITUKSEN NOUDATTAMATTA JÄTTÄMISESTÄ.

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554 FI09001798

**VEPRO OY**

Fitting instructions for 3038 FORD TRANSIT CONNECT 2014-


1. Place the sun visor on the door pillar. Measure the correct height as shown on the picture (495mm $\pm$ 10mm depending on driver height) and mark the hole positions.
2. Drill the holes with 4,0mm bit. Clean the drilled area and put some Sikaflex 221 or 252 or similar on and around the drilled holes.
3. Fit the visor on the door pillars. Adjust the visors angle and tighten all screws.
4. Fit the nut cover hats and cover collar hats.
5. Mount the warning label on a place where the driver can see it.

Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h.
If you drive constantly faster than 130 km/h the visor may tear off!

**ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO
RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.**

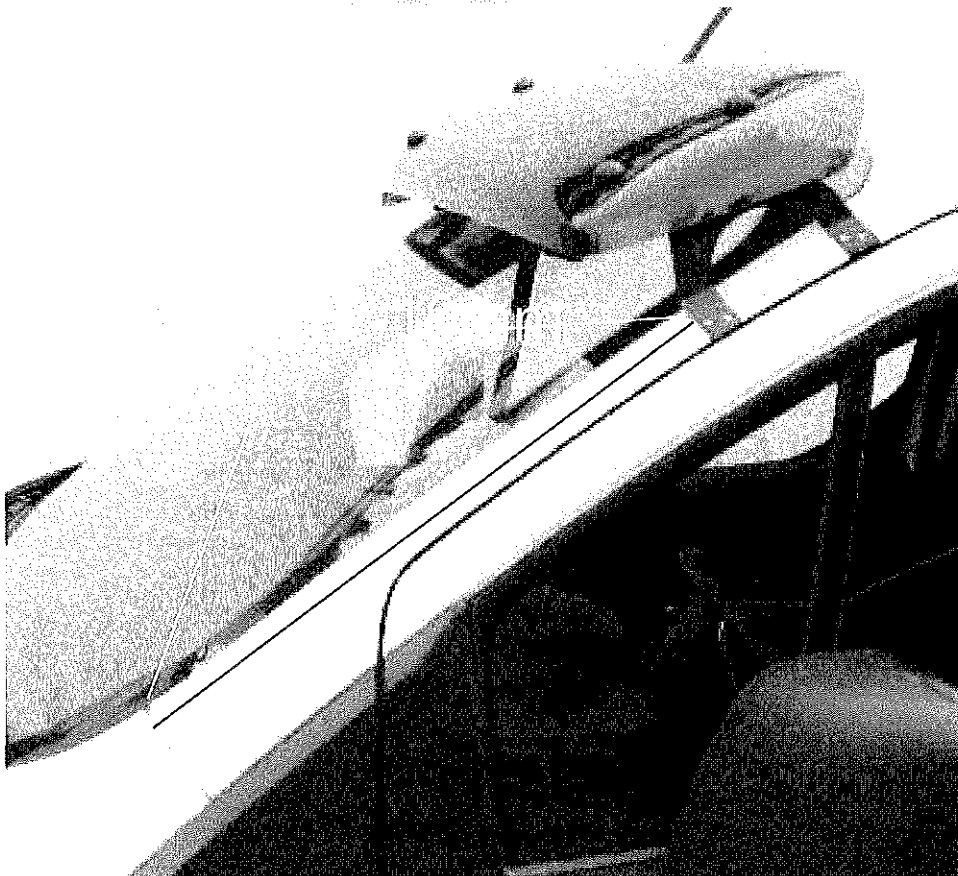

Osoite/Address
Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554

FI09001798

**VEPRO OY**

3037 FORD TRANSIT 05/2014- FITTING INSTRUCTIONS

To mount this product you will need Sikaflex 252 glue, Sikaflex primer and Sikaflex cleaner(not supplied with the kit).

1. Place the side bracket on the A-pilar so that the vertical side follows the innerside of the a-pilar and the bottom side is 600mm +-20mm fromt the bottom line of the a-pilar.



Make sure that longer edge of the sidebracket whic is marked, is towards center of vehicle.

2. Mark the area of the side bracket. Mark the hole positions and drill the holes with 3,5mm bit.

3. Clean the mounting area with sikaflex cleaner and the backside of the bracket.

4. Apply sikaflex primer on the cleaned areas and let it react for 15 minutes.

5. Apply sikaflex 252 on the holes and backside of the side bracket and place it on the a-pilar.

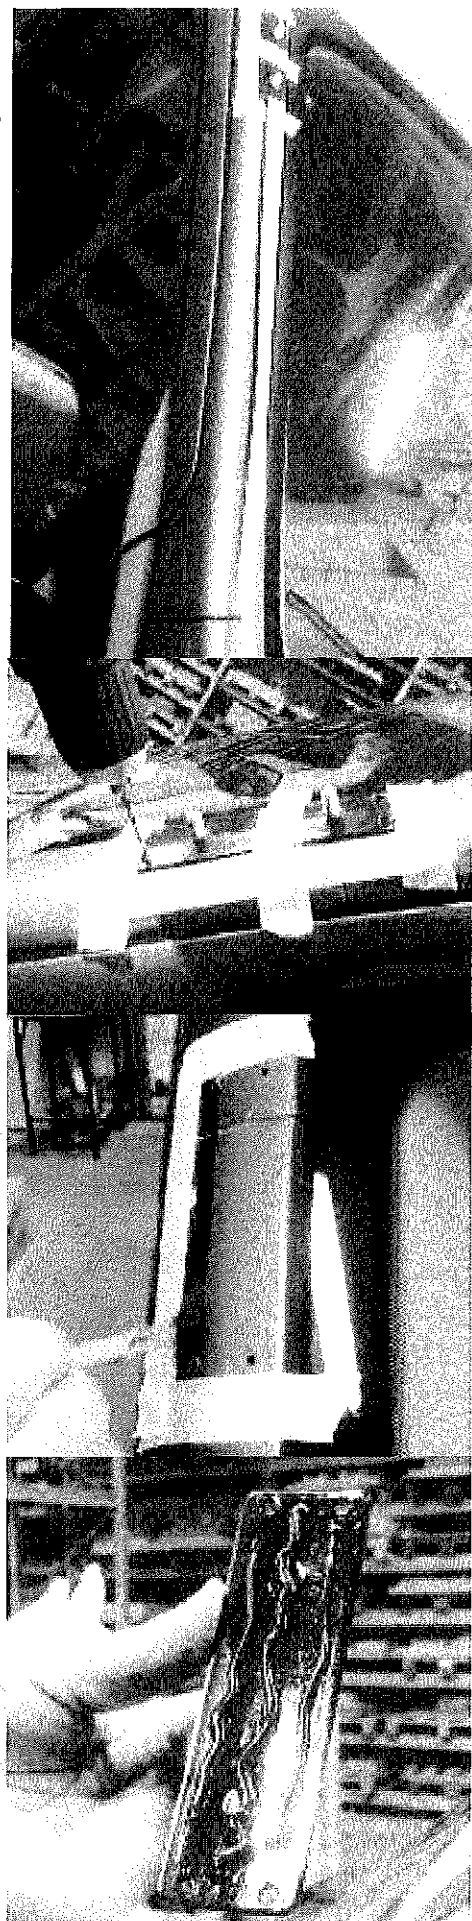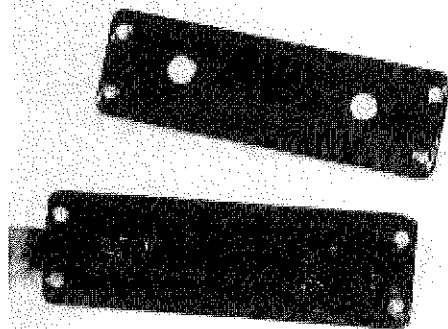

Osoite/Address
Tehtaankatu 21,
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000


Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554 FI09001798


**VEPRO OY**

3037 FORD TRANSIT 05/2014- FITTING INSTRUCTIONS


6. Make sure that longer edge of the sidebracket which is marked, is towards center of vehicle and mount the sidebracket on the pillar with 4,8x13mm screws.

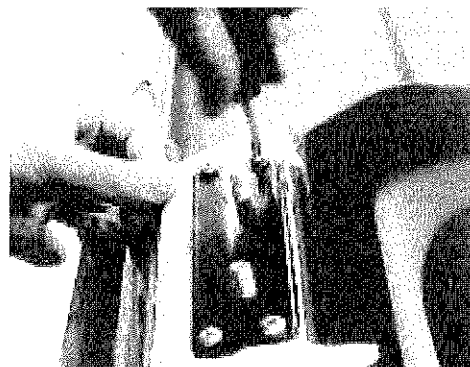

7. Mount the main bracket on the side brackets by using the 8mm washers, spring washers and nuts.

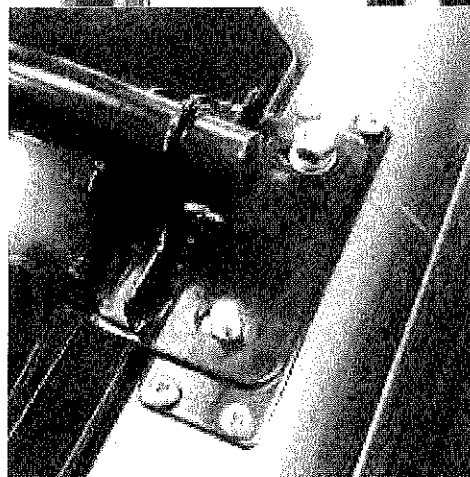

8. Mount the visor on the main bracket according to the drawing.

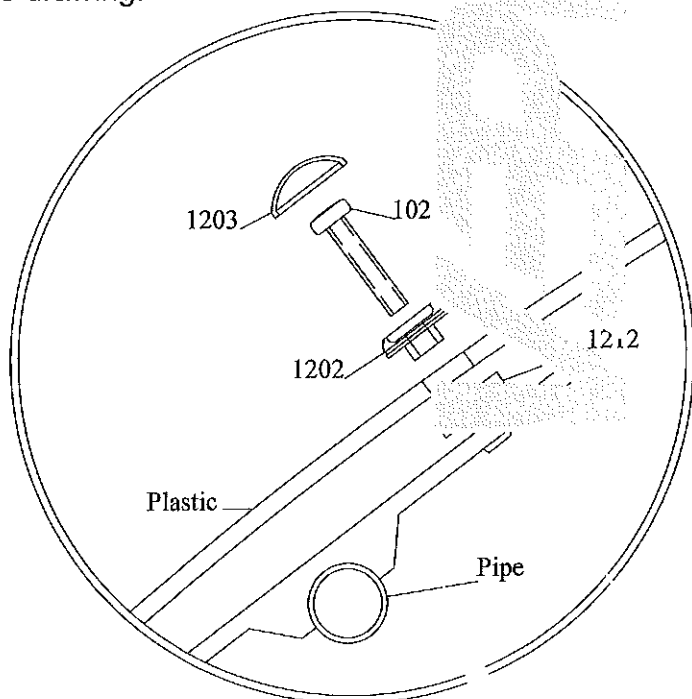

9. Mount the warning label on a place where the driver can see it. Remember to tighten all screws after few hours drive and every 6 months.

WARNING!

The speed limit for the vehicle with the visor mounted is 130 km/h. If you drive constantly faster than 130 km/h the visor may tear off!

**ANY NON-COMPLIANCE WITH THESE REGULATIONS CAUSE NO
RESPONSIBILITY TO THE MANUFACTURER OF ANY COSTS AND DAMAGES.**

Osoite/Address
Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554
FI09001798

**VEPRO OY**

3037 FORD TRANSIT 05/2014- ASENNUSOHJE

Asentaaksesi tämän tuotteen tarvitset Sikaflex 252 liimaa, Sikaflex primeria ja Sikaflex cleaneriä (ei sisälly pakkaukseen).


1. Aseta sivukiinnike A-pilarin päälle siten, että pystysuora reuna seuraa A-pilarin sisäreunaa ja alareuna on 600mm +/-20mm A-pilarin alasaumasta.

Huomioi että sivukiinnikkeen merkattu leveämpi sivu tulee tuulilasin puolelle.

2. Merkkää reikien paikat ja poraa reiät 3,5mm poran terällä.


3. Rajaa kiinnitysalue esim. maalarinteipillä. Puhdista rajattu alue ja kiinnikkeen takapinta Sikaflex cleanerillä.

4. Pyyhi rajattu alue ja kiinnikkeen takapinta Sikaflex primerilla ja anna sen vaikuttaa 15 minuuttia.

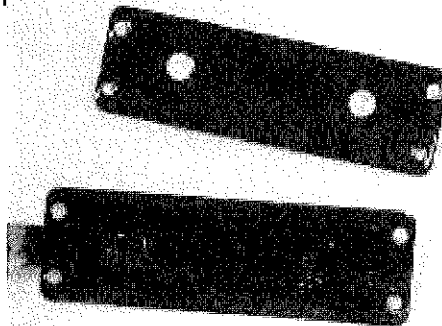

5. Laita Sikaflex 252 liimaa kiinnikkeen takapintaan ja aseta se A-pilarin päälle.

Huomioi että sivukiinnikkeen merkattu leveämpi sivu tulee tuulilasin puolelle.

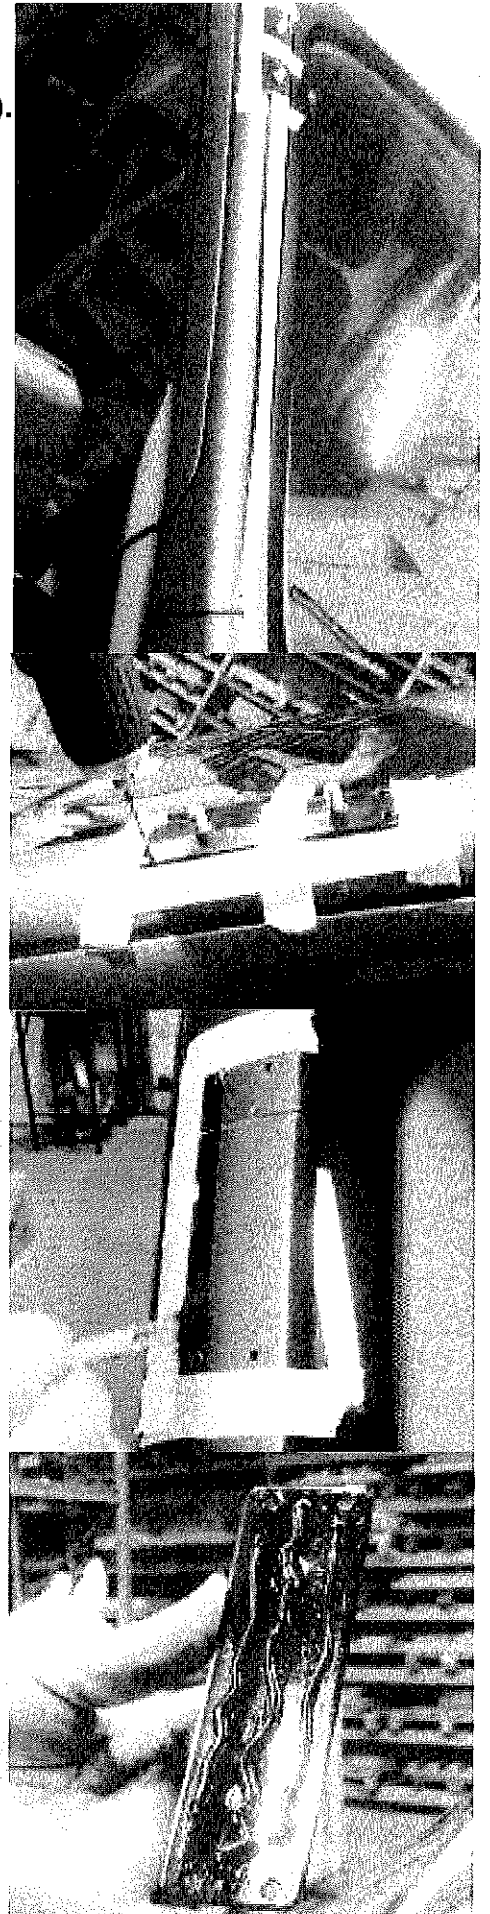

Osoite/Address
Tehtaankatu 21,
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000


Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554
FI09001798


**VEPRO OY**

3037 FORD TRANSIT 05/2014- ASENNUSOHJE


6. Laita liimaa asennusreikiin ja kiinnitä sivupelti 4,8x13mm ruuveilla.

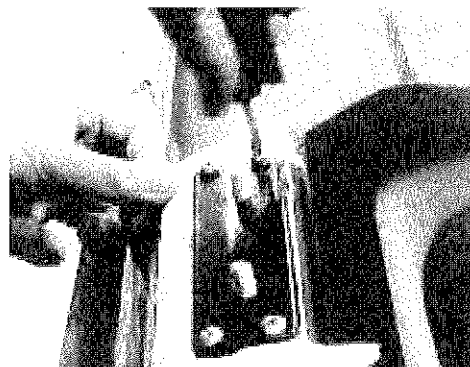

7. Asenna keskikiinnike kuvan mukaisesti.

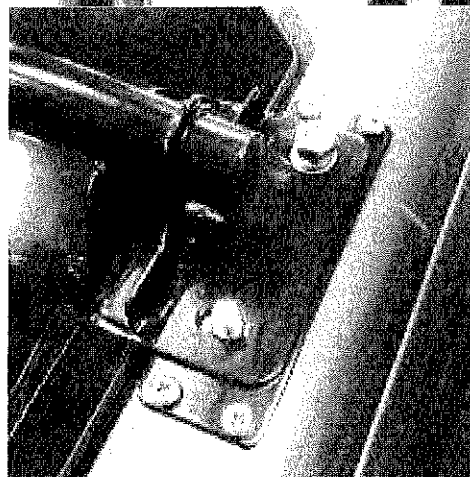

8. Asenna aurinkosuoja kiinnitysrautaan kuvan mukaisesti.

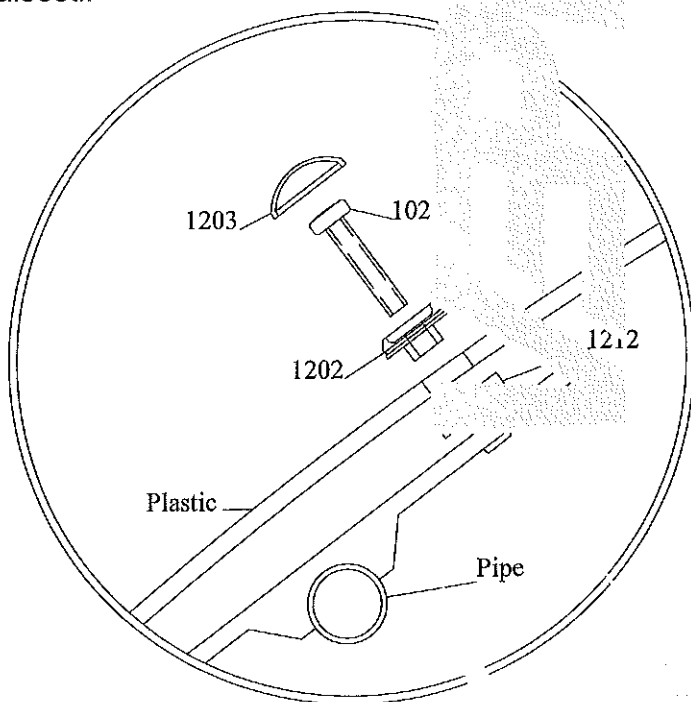

9. Kiinnitä varoitustarra paikkaan, josta kuljettaja näkee sen. Muista kiristää ruuvit muutaman tunnin ajon jälkeen ja kuuden kuukauden välein.

VAROITUS!

Aurinkosuojalla varustetun ajoneuvon enimmäisnopeus on 130 km/h. Jatkuva yli 130km/h nopeus voi aiheuttaa aurinkosuojan repeytymisen.

VALMISTAJA EI VASTAA VAHINGOISTA EIKÄ KORVAUKSISTA, JOTKA AIHEUTUVAT TÄMÄN VAROITUKSEN NOUDATTAMATTA JÄTTÄMISESTÄ.

Osoite/Address
Tehtaankatu 21
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554
FI09001798